

Resetting iN•Command JRVCS2

Resetting the system can resolve a number of issues. It is quick and it could be said that it is always worth a shot to do.

- 1) Press and hold the **Power** button on the iN•Command Display until it powers off completely. *I always say “if you press the Home button now - nothing should happen if it is off”. If it is on, the Home button would wake the display.*
- 2) Exit the vehicle and to the passthru/storage area beneath the RV. Find the BCM and remove the cover.
- 3) In the dead center of the board, not at the bottom and not at the top, there is a very small, unmarked, **Brown Button**. Press and hold this button for 2 Seconds and let go. A blue light will blink once at the top of the board when you let go - it will remain off.
- 4) Press and hold the **Power** button on the display until you see a flash of light.

